
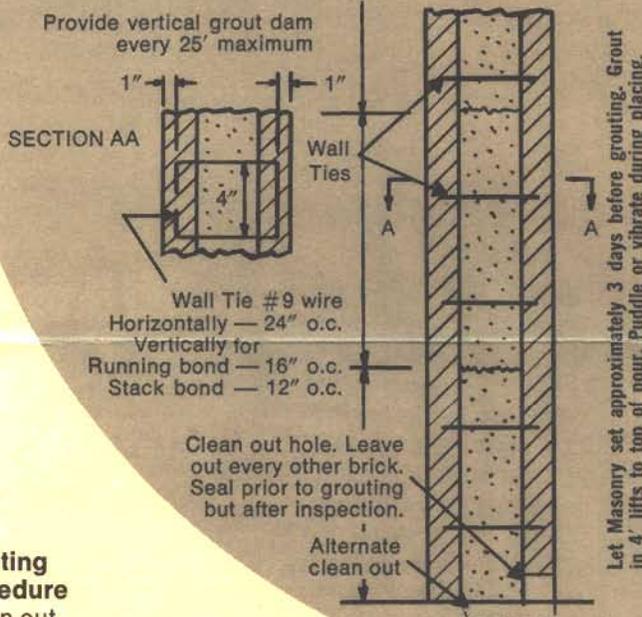
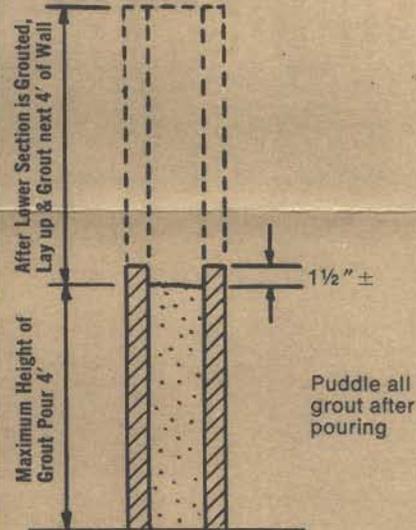


Low Lift High Lift Grouting

**Low Lift
Grouting
Procedure**
(No Clean
out holes
required)


BRICK

BLOCK

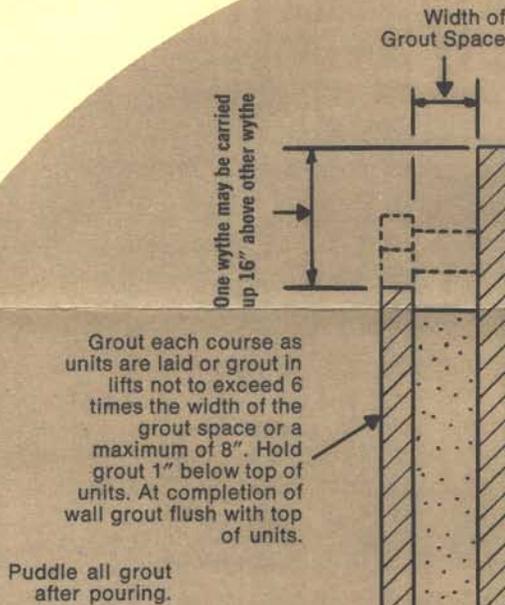

**High Lift
Grouting
Procedure**
(Clean out
holes are
required)

BRICK

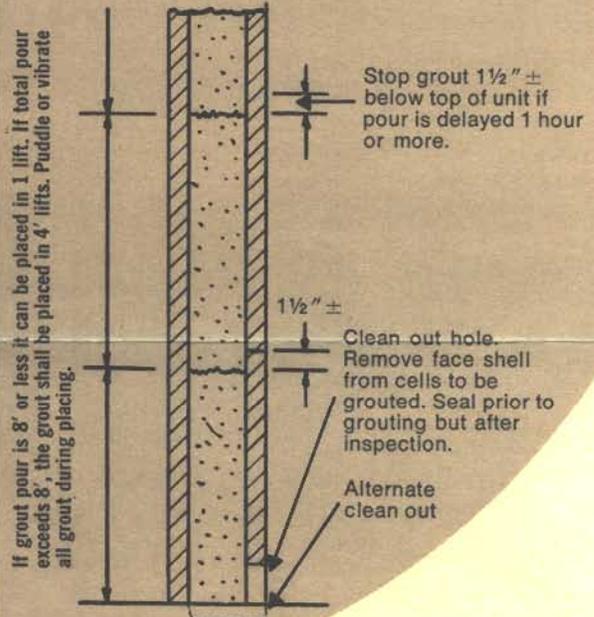

BLOCK

For
Engineering Information
and Details
contact

MASONRY INSTITUTE OF AMERICA

386 Beech Ave., Suite #4 • Torrance, CA 90501-6202
Tel: (310) 328-4400 - Fax: (310) 328-4320



3M1-75MIA116